



# Landscape Pages Cart Assembly Instructions

MB110-INST  
Rev. A

**1.** Unbox the assembly. It will be packed like this.

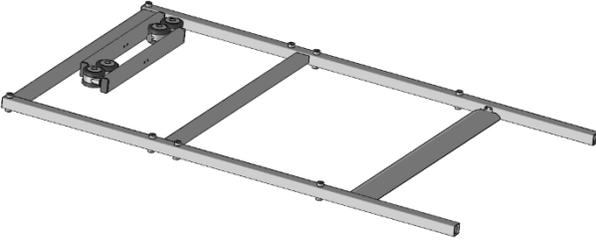


**2.** Move the feet into position as shown and insert (2) star locking washers and (2) ¼-20 fasteners for each foot. Tighten to a torque of 75-80 in-lb.

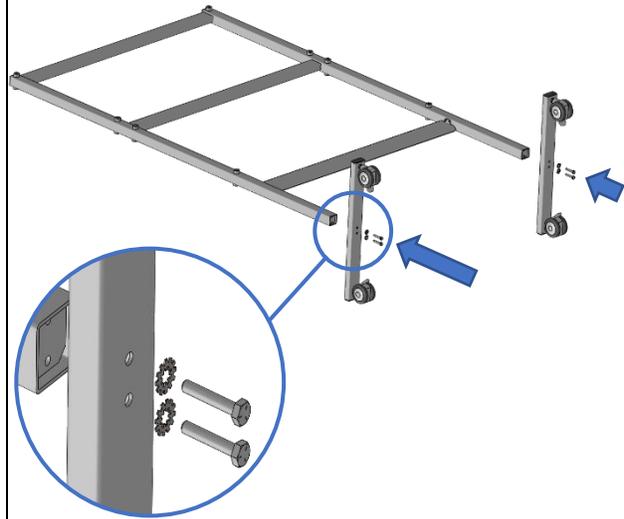

**3.** Rotate the tray 90 degrees clockwise and install one #10 screw at each end. Tighten to a torque of 30.0-35.0 in-lb.



**4.** Completed assembly should look like this.

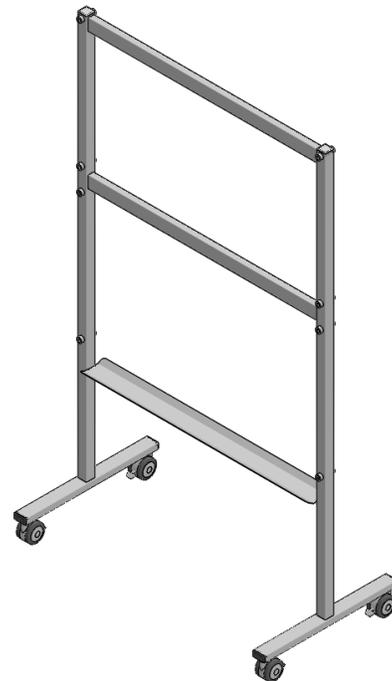

For questions please call us at (616) 396-1142