



Illusions 2.0 Quick Connect Instructions

956810-INST
Rev. A


1. Tilt cabinet and use Phillips drive to extend front levelers far enough down that hex feature is accessible with a wrench. Slide cabinet into position. Use a 7/8" flat wrench for final leveler adjustments. Use 1/4" socket wrench with extension via back access holes to adjust back levelers.

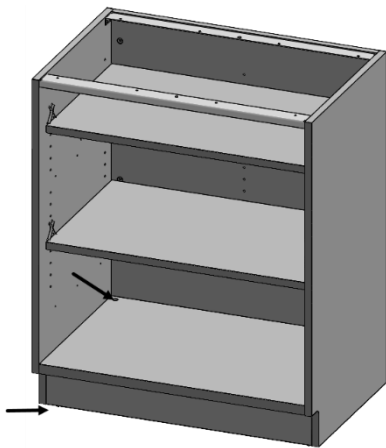

2. Extend front levelers on all additional cabinets and slide into place next to first cabinet. Adjust levelers as needed to align cabinets.

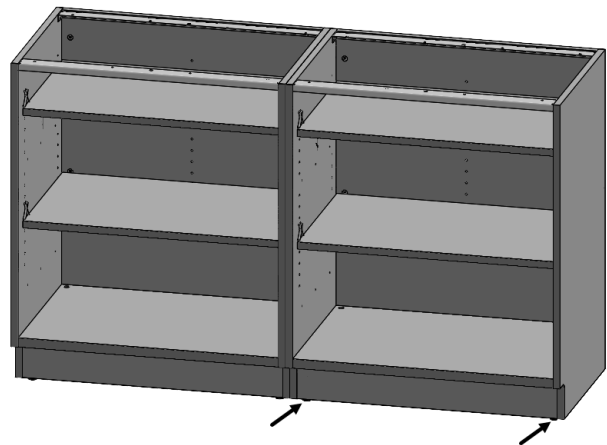

3. After aligning cabinets, reach under the top and push the quick connect clip until it engages with the slot on the adjacent cabinet.

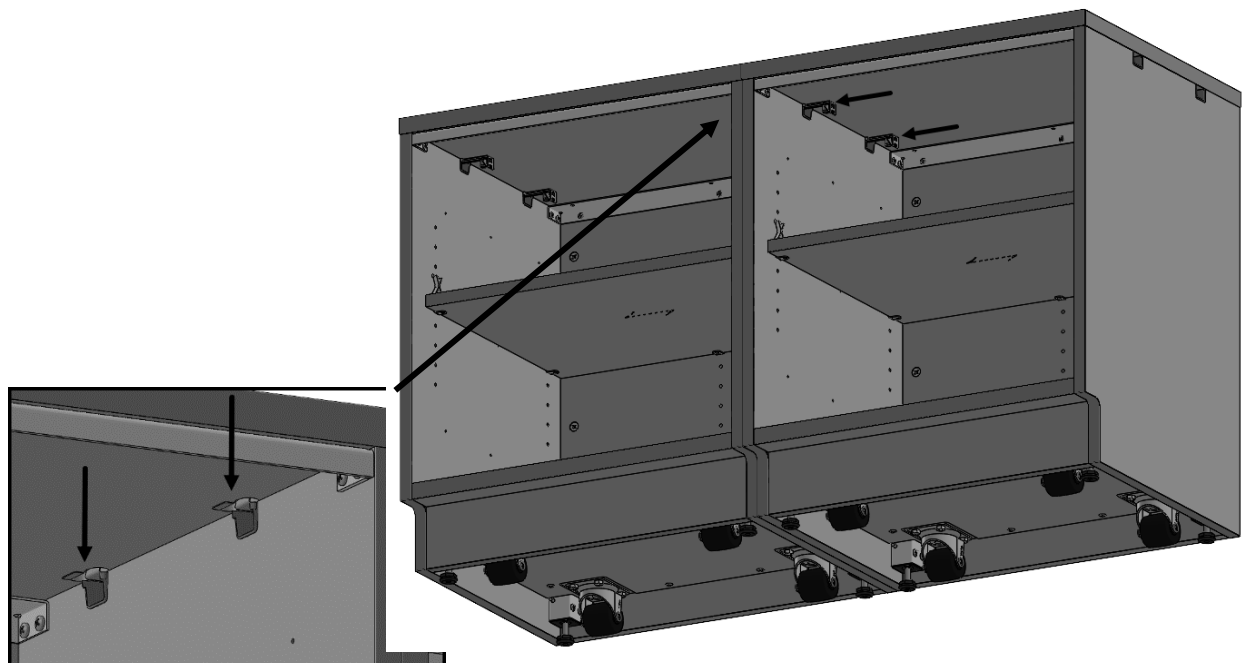

For questions please call us at (616) 396-1142